

# OPERATION GUIDE

GUIDE D'OPERATION  
GUÍA DE LA OPERACIÓN  
GUIDA DI FUNZIONAMENTO  
BETRIEBSFUHRER



**LASCAR ELECTRONICS LTD.**  
Module House  
Whiteparish, Salisbury  
Wiltshire, SP5 2SJ  
UNITED KINGDOM  
Tel: +44 (0) 1794 884567  
Fax: +44 (0) 1794 884616  
E-mail: sales@lascar.co.uk



**LASCAR ELECTRONICS INC.**  
3750 West 26th Street  
Erie  
PA 16506  
U.S.A.  
Tel: +1 (814) 835 0621  
Fax: +1 (814) 838 8141  
E-mail: us-sales@lascarelectronics.com



**LASCAR ELECTRONICS (HK) LTD.**  
Unit Nos. 6-8, on 19/F Futura Plaza  
111-113 How Ming Street  
Kwai Tong, Kowloon  
HONG KONG  
Tel: +852 2389 6502  
Fax: +852 2389 6535  
E-mail: purchasing@lascar.com.hk



## EL-USB-1



<b>Double flash</b> Clignotement double	- Logger is primed. L'enregistreur est amorcé.		<b>Single flash</b> Clignotement simple	- Logging, no alarm. Enregistrement en cours, pas d'alarme.
<b>Parpadeo doble</b> Lampeggio doppio	- El Registrador está preparado. Il logger viene attivato.		<b>Parpadeo simple</b> Lampeggio singolo	- Registrando, sin alarma. Registrazione in corso, nessun allarme.
<b>Leuchtet zweimal auf</b>	- Logger ist bereit.		<b>Leuchtet einmal auf</b>	- Zeichnet auf, kein Alarm.

<b>Double flash</b> Clignotement double	- High alarm. Haute alarme.		<b>Single flash</b> Clignotement simple	- Low alarm. Basse alarme.
<b>Parpadeo doble</b> Lampeggio doppio	- Alarma alta. Alarme limite max.		<b>Parpadeo simple</b> Lampeggio singolo	- Registrando, sin alarma. Registrazione in corso, nessun allarme.
<b>Leuchtet zweimal auf</b>	- Alarm wegen Überschreitung.		<b>Leuchtet einmal auf</b>	- Alarm wegen Unterschreitung.

<b>Double/Single flash</b> Clignotement double/simple	- Memory full. Mémoire pleine.		<b>Flash every 60 sec.</b> Clignotement toutes les 60 sec.	- Low battery. Batterie faible.
<b>Parpadeo doble/simple</b> Lampeggio singolo/doppio	- Memoria llena. Memoria piena.		<b>Parpadeo cada 60 seg.</b> Lampeggio ogni 60 sec.	- Bateria baja. Bateria scarica.
<b>Leuchtet zweimal/einmal auf</b>	- Speicher voll. Speicher voll.		<b>Leuchtet auf alle 60 Sek.</b>	- Batterie schwach.

## EL-USB-2



<b>Green triple flash</b> Triple clignotement vert	- Logger full, no alarm on the channel. Enregistreur plein, pas d'alarme sur la voie.		<b>Green double flash</b> Double clignotement vert	- Delayed start. Retard au démarrage.
<b>Parpadeo verde triple</b> Lampeggio verde triplo	- Registrador lleno, sin alarma en el canal. Logger pieno, nessun allarme sul canale.		<b>Parpadeo verde doble</b> Lampeggio verde doppio	- Inicio demorado. Avvio ritardato.
<b>Leuchtet dreimal grün auf</b>	- Logger voll, kein Alarm am Kanal.		<b>Leuchtet zweimal grün auf</b>	- Verzögerter Start.

<b>Green single flash</b> Simple clignotement vert	- Logging, no alarm. Enregistrement en cours, pas d'alarme.		<b>Lampeggio verde singolo</b> Leuchtet einmal grün auf	- Registración en curso, nessun allarme. Aufzeichnung, kein Alarm.
<b>Parpadeo verde simple</b>	- Registrando, sin alarma.			

<b>Red Triple flash</b> Triple clignotement rouge	- Logger full, alarm on the channel. Enregistreur plein, alarme sur la voie.		<b>Red Double flash</b> Double clignotement rouge	- Logging, high alarm on the channel. Enregistrement en cours, haute alarme sur la voie.
<b>Parpadeo rojo triple</b> Lampeggio rosso triplo	- Registrador lleno, alarma en el canal. Logger pieno, allarme sul canale.		<b>Parpadeo rojo doble</b> Lampeggio rosso doppio	- Registrando, alarma alta en el canal. Registrazione in corso, allarme limite max. sul canale.
<b>Leuchtet dreimal rot auf</b>	- Logger voll, Alarm am Kanal.		<b>Leuchtet zweimal rot auf</b>	- Aufzeichnung, Alarm wegen Überschreitung am Kanal.

<b>Red Single flash</b> Simple clignotement rouge	- Logging, low alarm on the channel. Enregistrement en cours, basse alarme sur la voie.		<b>Lampeggio rosso singolo</b> Leuchtet einmal rot auf	- Registración en curso, allarme limite min. sul canale. Aufzeichnung, Alarm wegen Unterschreitung am Kanal.
<b>Parpadeo rojo simple</b>	- Registrando, alarma baja en el canal.			

 
<b>No LEDs flash</b> Pas de clignotements	- Logger stopped or battery empty. Enregistreur arrêté ou batterie déchargée.		<b>Nessun LED lampeggiante</b> Kein Aufleuchten der LEDs	- Logger arrestato o batteria scarica. Logger gestoppt oder Batterie leer.
<b>Ningún LED parpadeando</b>	- Registrador parado batería vacía.			

## Windows™ Vista

## USB Driver Installation


**NOTE** - To install the USB driver you must have administrative privileges on the computer.  
Ensure that the EL-WIN-USB Configuration Software CD is in the CD drive throughout this installation.

**NOTE** - At various times Vista may ask security questions; allow access when prompted

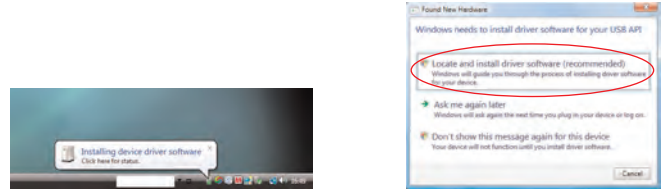

1. Insert the USB data logger into a USB port on the computer. The following screens should automatically appear.

 2. Select "**Locate and install driver software (recommended)**" then click "**Next**".

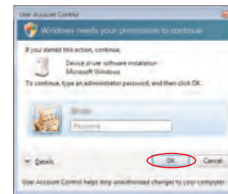

3. Installing the driver requires administrative privileges. Accept the "**User Account Control**" request, enter password if necessary.



4. The following screen should automatically appear.



5. The above window will appear after a few seconds. Insert the disc that came with your USB Data Logger , then click "**Next**".



 
6. When this window appears, click "**Install this driver software anyway**".  
NOTE: This is a feature of Windows Vista. Selecting "**Install this software anyway will not cause any adverse changes/effects on your computer**".




7. Installation is now complete, Click "**Finish**".

8. You can now begin using your data logger by clicking the icon on your computer's desktop.

**NOTE** - Ensure that the EL-WIN-USB Configuration Software CD is in the CD drive throughout this installation.

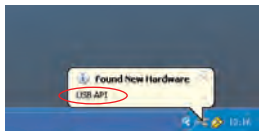


1. Insert the USB data logger into a USB port on the computer. The following screens should automatically appear. Windows™ XP refers to the data logger as "USB API" and "F32x Express USB Device" throughout this installation.

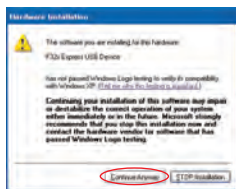

3. When this window appears, click "Continue Anyway"

 **NOTE** - This is a feature of Windows™ XP. Selecting "Continue Anyway" will not cause any adverse changes/effects on your computer.



5. The Window will close and you will see the following message.

7. You can now begin using your data logger by clicking the  icon on your computer's desktop.



- Green LED**  
Diode verte  
LED Verde  
Grüne LED
- Red LED**  
Diode rouge  
LED Rojo  
LED rosso  
Rote LED
- Green double flash** - every 20 seconds: logger full, no alarm.
- Double clignotement vert** - toutes les 20 secondes: enregistreur plein, pas d'alarme.
- Parpadeo verde doble** - cada 20 segundos: registrador lleno, alarma.
- Lampeggio verde doppio** - ogni 20 secondi: logger pieno, nessun allarme.
- Leuchtet zweimal grün auf** - alle 20 Sekunden: Logger voll, kein Alarm.

- Green Single flash** - every 30 seconds: delayed start.  
- every 20 seconds: low battery, logging, no alarm. - every 10 seconds: logging, no alarm.
- Simple clignotement vert** - toutes les 30 secondes: retard au démarrage. - toutes les 20 secondes: batterie faible, enregistrement en cours, pas d'alarme. - toutes les 10 secondes: enregistrement en cours, pas d'alarme.
- Parpadeo verde simple** - cada 30 segundos: inicio demorado.  
- cada 20 segundos: batería baja, registrando, sin alarma. - cada 10 segundos: registrando, sin alarma.
- Lampeggio verde singolo** - ogni 30 secondi: avvi ritardato. - ogni 20 secondi: batteria scarica, registrazione in corso, nessun allarme. - ogni 10 secondi: registrazione in corso, nessun allarme.
- Leuchtet einmal grün auf** - alle 30 Sekunden: Verzögerter Start.  
- alle 20 Sekunden: Batterie schwach, Aufzeichnung, kein Alarm. - alle 10 Sekunden: Aufzeichnung, kein Alarm.

- Red/Green single flash** - every 20 seconds: logger full, last value equal to or exceeds the low or high alarm.
- Simple clignotement rouge/vert** - toutes les 20 secondes: enregistreur plein, dernière valeur égale ou supérieure à basse ou haute alarme.
- Parpadeo rojo/verde simple** - Cada 20 segundos: registrador lleno, último valor igual o superior a la alarma baja o alta.
- Lampeggio rosso/verde singolo** - ogni 20 secondi: Logger pieno, ultimo valore uguale o maggiore dell'allarme limite min. o max.
- Leuchtet einmal rot/grün auf** - alle 20 Sekunden: Logger voll, letzter Wert entspricht genau dem Wert oder überschreitet den Wert für einen Alarm wegen Unterschreitung oder Überschreitung.

- Red Double flash** - every 10 seconds: logging, high alarm.  
- every 20 seconds: logging, high alarm, low battery.
- Double clignotement rouge** - toutes les 10 secondes: enregistrement en cours, haute alarme. - toutes les 20 secondes: enregistrement en cours, haute alarme, batterie faible.

- Parpadeo rojo doble** - Cada 10 segundos registrando, alarma alta cada 20 segundos registrando: alarma alta, batería baja.
- Lampeggio rosso doppio** - ogni 10 secondi: registrazione in corso, allarme limite max. - ogni 20 secondi: registrazione in corso, allarme limite max, batteria scarica.
- Leuchtet zweimal rot auf** - alle 10 Sekunden: Aufzeichnung, Alarm wegen Überschreitung. - alle 20 Sekunden: Aufzeichnung, Alarm wegen Überschreitung, Batterie schwach.

- Red Single flash** - every 10 seconds: logging, low alarm.  
- every 20 seconds: logging, low alarm, low battery.
- Simple clignotement rouge** - toutes les 10 secondes: enregistrement en cours, basse alarme. - toutes les 20 secondes: enregistrement en cours, basse alarme, batterie faible.
- Parpadeo rojo simple** - cada 10 segundos: registrando, alarma baja. - cada 20 segundos registrando, alarma baja, batería baja.
- Lampeggio rosso singolo** - ogni 10 secondi: registrazione in corso, allarme limite min. - ogni 20 secondi: registrazione in corso, allarme limite min, batteria scarica.
- Leuchtet einmal rot auf** - alle 10 Sekunden: Aufzeichnung, Alarm wegen Unterschreitung. - alle 20 Sekunden: Aufzeichnung, Alarm wegen Unterschreitung, Batterie schwach.

- No LEDs flash** - LEDs disabled during configuration to save battery power and increase logging life or) Logger stopped or) Battery empty.

- Pas de clignotements** - Diodes désactivées pendant la configuration pour économiser la batterie et augmenter la vie de l'enregistreur or) Enregistreur arrêté ou) Batterie déchargée.

- Ningún LED parpadeando** - LEDs deshabilitados durante la configuración para ahorrar batería y aumentar la vida de registro or) Registrador parado o) Batería vacía.

- Nessun LED lampeggiante** - I LED sono disattivati durante la configurazione al fine di risparmiare la carica della batteria ed estendere la durata di registrazione o) Logger arrestato o) Batteria scarica.

- Kein Aufleuchten der LEDs** - LED während der Konfiguration abgeschaltet, um Batteriestrom zu sparen und die Aufzeichnungsdauer zu verlängern oder) Logger gestoppt oder) Batterie leer.

### Battery Installation

Before using the data logger you will need to insert the 3.6V 1/2AA battery provided, following the instructions below. Replacement batteries available from [www.lascarelectronics.com](http://www.lascarelectronics.com). PN: BAT 3V6 1/2AA.

### Installation de la batterie

Avant d'utiliser l'enregistreur de données, vous devez suivre les instructions ci-dessous pour installer la batterie 1/2AA de 3.6 V. Vous pouvez vous procurer des batteries de rechange auprès de [www.lascarelectronics.com](http://www.lascarelectronics.com). N° de réf. : BAT 3V6 1/2AA.

### Cómo colocar las baterías

Antes de utilizar el registrador de datos, necesitará colocar la batería 1/2AA de 3.6V suministrada, siguiendo estas instrucciones. Pueden adquirirse baterías de repuesto en [www.lascarelectronics.com](http://www.lascarelectronics.com). Pieza número: BAT 3V6 1/2AA.

### Installazione della batteria

Prima di utilizzare il data logger, inserire la batteria 1/2 AA da 3.6 V fornita in dotazione seguendo le istruzioni. Le batterie di ricambio sono disponibili sul sito web [www.lascarelectronics.com](http://www.lascarelectronics.com), n. art: BAT 3 V6 1/2 AA.

### Einsetzen der Batterie

 
 
Vor der Benutzung des Datenloggers muss eine 3.6V 1/2AA Batterie entsprechend der untenstehenden Anweisungen eingesetzt werden. Ersatzbatterien können über [www.lascarelectronics.com](http://www.lascarelectronics.com) bezogen werden; PN: BAT 3V6 1/2AA.



# START HERE

## Windows™ XP/2000/VISTA EL-WIN-USB Configuration Software Installation

**NOTE** - The screen shots on page one of the guide are taken from Windows™ Vista. If you are installing using Windows™ XP or 2000, the screens may look slightly different, however the content will be the same. To install the software you must have administrative privileges on the computer.

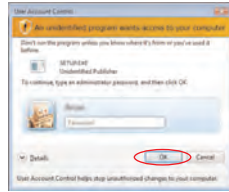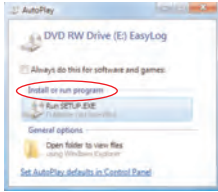

1. Insert the EL-WIN-USB Configuration Software CD into the CD drive of your computer. If the CD does not automatically navigate to the CD and double click **"Setup"**.

2. Installing software requires administrative privileges. Accept the **"User Account Control"** request, enter password if necessary.

# Windows™ 2000

## USB Driver Installation

**NOTE** - Ensure that the EL-WIN-USB Configuration Software CD is in the CD drive throughout this installation.



1. Insert the USB data logger into a USB port on the computer. The following screens should automatically appear. Windows™ 2000 refers to the data logger as **"USB API"** until the end of this installation.

2. Click **"Next"**.

 


3. Click **"Next"**.


4. Read the **"IMPORTANT NOTICE"**, select **"I Agree"** and **"Next"**.




3. Select **"Search for a suitable driver for my device (recommended)"** then click **"Next"**.

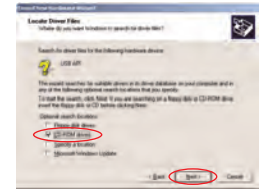

 4. Select **"CD-ROM drivers"** only, then click **"Next"**.

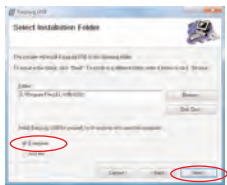

 5. Select **"Everyone"**, click **"Next"**.

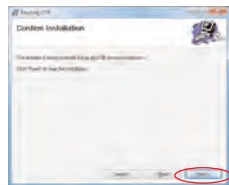

6. Click **"Next"** to start the Installation. **NOTE** - A progress bar will be displayed until the installation is complete.



 
5. Click **"Next"**.



6. Windows™ 2000 now refers to the data logger as the **"F32x Express USB Device"**. Click **"Finish"**.



7. EasyLog USB is being installed.

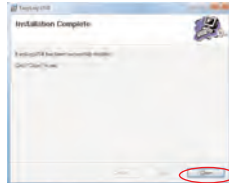

8. Click **"Close"**. An icon  will now be placed on your desktop.

7. You can now begin using your data logger by clicking the  icon on your computer's desktop.

You have installed the EL-WIN-USB Configuration Software successfully. You now have to install the USB hardware driver. Please refer to the relevant section depending on the Windows platform you are using.