


Bedienungsanleitung

Mantelthermoelement
0625 1429-11

B+B Thermo-Technik GmbH
Heinrich-Hertz-Straße 4, D-78166 Donaueschingen
Tel. +49 771 83160, Fax: +49 771 831650
info@bubthermo.de, www.bubthermo.de

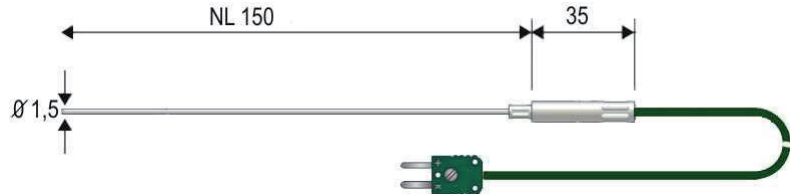


1. Mantelthermoelement mit Ausgleichsleitung aus PVC mit Miniaturstecker (gelb oder grün) am Messgerät in die dafür vorgesehene Buchse einstecken.
2. Messwert am eingeschalteten Messgerät ablesen.
3. Messbereich des Mantelthermoelements -100°C bis +1000°C

Operating Instruction

Mineral Insulated Thermocouple
0625 1429-11

B+B Thermo-Technik GmbH

Heinrich-Hertz-Straße 4, D-78166 Donaueschingen
Phone +49 771 83160, Fax: +49 771 831650
info@bubthermo.de, www.bubthermo.com

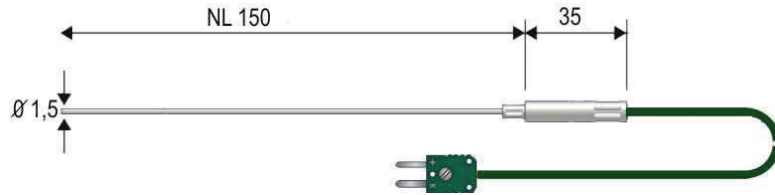

1. Plug in the Mineral Insulated Thermocouple with compensation cable of PVC with Miniature Plug (yellow or green) into the destined socket at the measurement device.
2. Read out the measured value of the measurement device.
3. Measuring range of Mineral Insulated Thermocouple $-100^{\circ}\text{C} \dots +1000^{\circ}\text{C}$
($-148^{\circ}\text{F} \dots +1832^{\circ}\text{F}$)