

AW-100

# MICROWICK

## QUICK AND CLEAN DESOLDERING WITH MICROWICK.

- **PURE COPPER BRAID** Cleanest, most efficient wick material. Attracts solder fast!
- **ECONOMICAL** Only 1 cm wick or less is used for each application.
- **NO CLEAN FLUX FORMULA**
- **HANDY DISPENSER**


### PROFESSIONAL

2 meter length  
2.6 mm width

812617




ENTLÖTSAUGLITZE \*\* DESOLDERING WICK \*\* DESOLDEERLITZE \*\* TRESSE À DESSOUDER

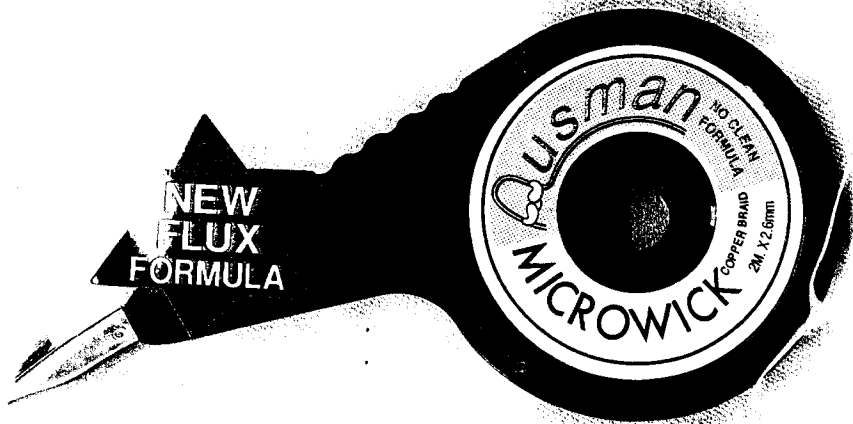


# MICROWICK

## ●HOW TO USE MICROWICK

1. Place desolder braid over solder to be removed, then press hot iron onto desolder braid till solder is absorbed.

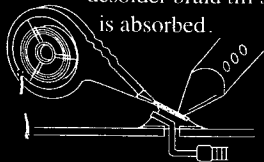

2. Remove desolder braid before solder solidifies.

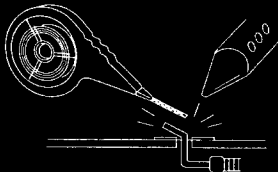

3. Cut off braid that has become saturated with solder.  
Repeat "1." if solder removal is incomplete.

